



Product Features and Applications

When the water level in the pool or tank drops and the float valve opens to drain/release water, the pressurized water in the inlet pipe lifts the internal piston, opening the sealing surface and the valve opens to supply water. When the water level rises to the control line, the float valve closes, the piston moves down to seal the sealing surface, and the valve stops supplying water.

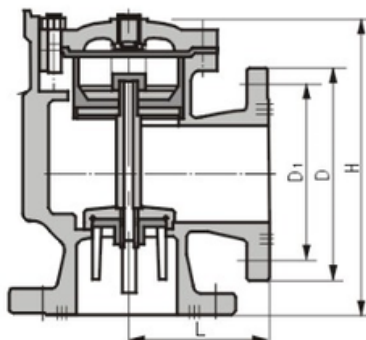

Installation Schematic

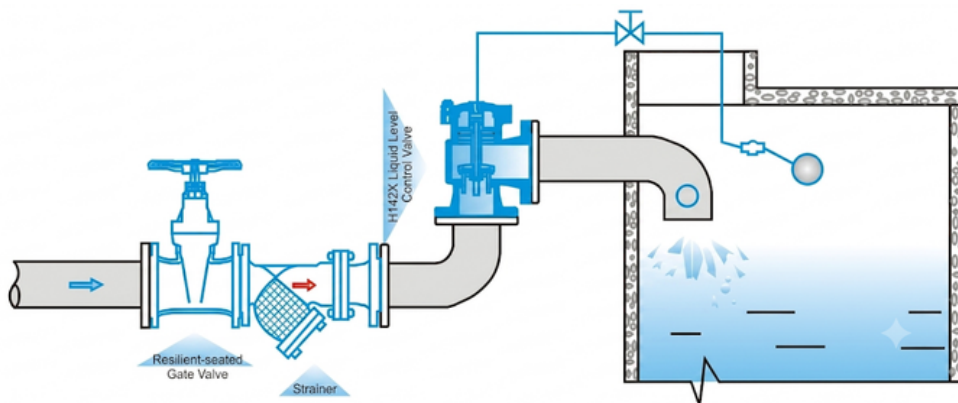

Main External and Connection Dimensions

DN	40	50	65	80	100	125	150	200	250	300	350
D	145	160	180	195	215	245	280	335	405	460	520
D1	110	125	145	160	180	210	240	295	355	410	470
L	107	115	125	135	146	165	180	215	255	285	325
H	235	243	258	280	307	358	400	490	576	663	750